





MTS Sprocket: 15T, 6mm Small Hub




Assembly Guide (RB-Lyn-913)


V1.0 August 2016


STEP 1: Thread set screw into hub

	
1x RB-Ama-01	1x RB-TeX-48
6mm Hub	10-32 x 1/4" Set S

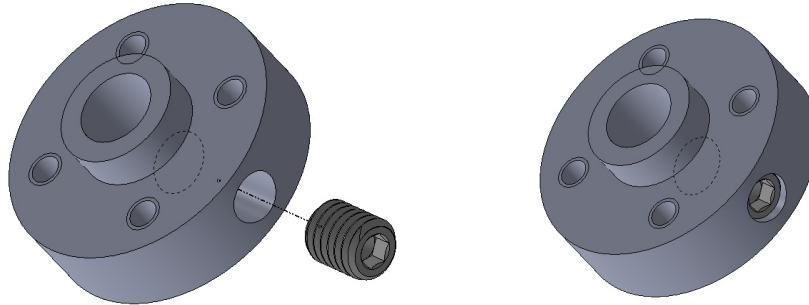


STEP 2: Connect hub to sprocket wall



		
1x RB-Lyn-909	4x RB-TeX-20	4x RB-TeX-12
15T-Lexan-S	4-40x5/8" SHCS	4-40x1/4" LN

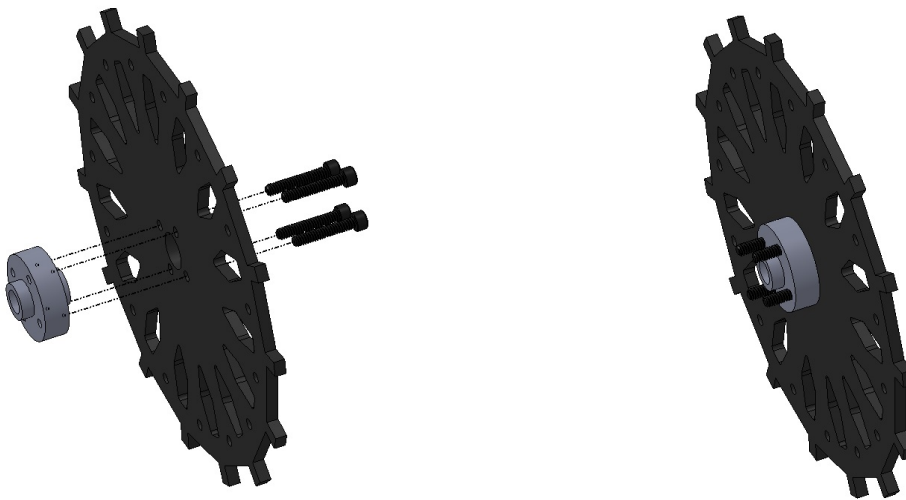


STEP 3 (optional): Connect sprocket sub-assembly to motor shaft & secure set screw to flat

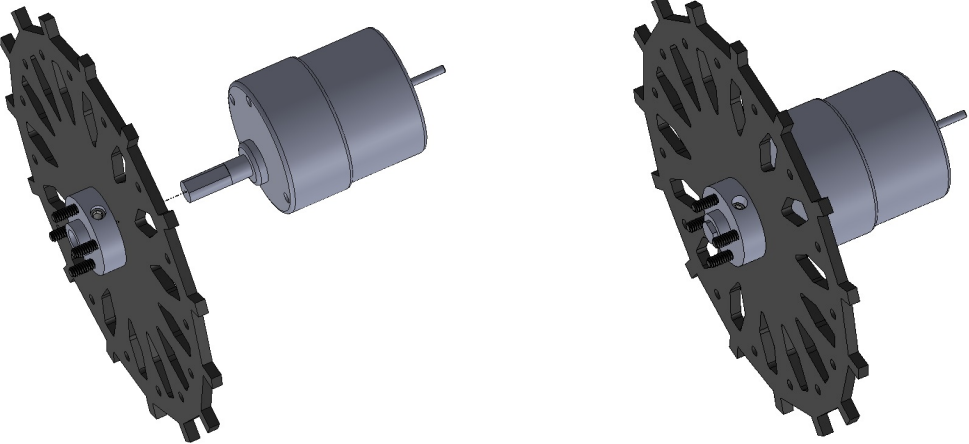

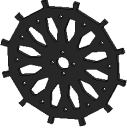


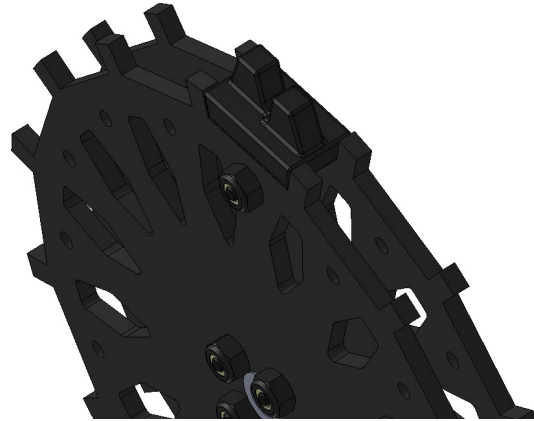
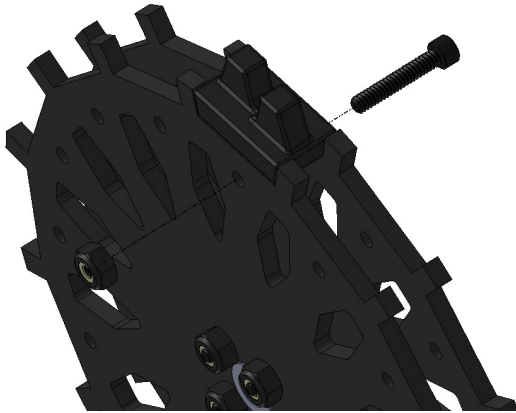
STEP 4: Add second sprocket wall

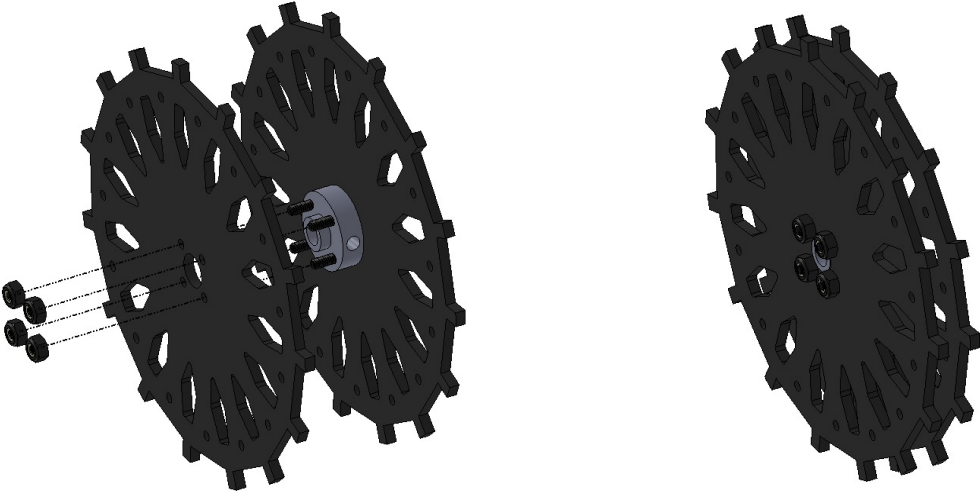	
1x RB-Lyn-909	4x RB-TeX-12
15T-Lexan-S	4-40x1/4" LN






STEP 5: Attach tooth

		
1x RB-Skj-01	1x RB-TeX-20	1x RB-TeX-12
MTS Tooth	4-40x5/8" SHCS	4-40x1/4" LN



STEP 6: Attach remaining teeth

		
14x RB-Skj-01	14x RB-TeX-20	14x RB-TeX-12
MTS Tooth	4-40x5/8" SHCS	4-40x1/4" LN

